

1 Depending on the project requirements you choose a **base software package**

Shading

- 30 x "Blind"
- 64 x "Timer"
- 128 x "Logics"
- 64 x "Actions"
- 48 x "Rooms/Sections"
- 1 x "Alarm system" TELENOT
- All installation and device interfaces*

Energy manager

- 5 x "Energy meter"
- 10 x "Device"
- 1 x "Energy manager"
- 1 x "E-Mobility"
- 64 x "Timer"
- 128 x "Logics"
- 64 x "Actions"
- 48 x "Rooms/Sections"
- 1 x "Alarm system" TELENOT
- All installation and device interfaces*

Lighting

- 40 x "Light"
- 64 x "Timer"
- 128 x "Logics"
- 64 x "Actions"
- 48 x "Rooms/Sections"
- 1 x "Alarm system" TELENOT
- All installation and device interfaces*

Room control

- 10 x "Light"
- 3 x "Blind"
- 2 x "Ventilation"
- 5 x "Device"
- 2 x "Room control"
- 2 x "Music"
- 64 x "Timer"
- 128 x "Logics"
- 64 x "Actions"
- 48 x "Rooms/Sections"
- 1 x "Alarm system" TELENOT
- All installation and device interfaces*

KNX

- 128 x "Light"
- 64 x "Blind"
- 64 x "Device"
- 128 x "Room control"
- 8 x "Music"
- 64 x "Timer"
- 128 x "Logics"
- 64 x "Actions"
- 48 x "Rooms/Sections"
- 1 x "Alarm system" TELENOT
- All installation and device interfaces*

Intercom

- 16 x "Video"
- 8 x "Door intercom"
- 128 x "Logics"
- 64 x "Actions"
- 48 x "Rooms/Sections"
- 1 x "Alarm system" TELENOT
- All device interfaces*

Manager

- Access control for up to 40 persons
- Dashboard

FLEX PRO

- Select a number of system elements for unrestricted use - for maximum functionality
- All installation and device interfaces*

10

20

30

50

80

100

150

200

300

*except the Vaillant interface

2 If you need additional elements, installation systems or device interfaces, select the required **extension**

➤ System elements

A maximum of 5 extensions are possible

10

20

30

40

50

...300

➤ Installation systems

➤ Device interfaces